

# **Operating Instructions for Summit Impact IM21 Task Chairs.**

**All adjustments should be made whilst seated.**

1. The overall height of the chair is adjusted by lifting the lever located below the middle of the seat on the right hand side. Lift your weight off the chair allowing it to rise and release the lever at the desired height. To lower simply lift the lever.
2. The back angle is adjusted by pushing down the lever located below the seat on the left-hand side. Please be aware that there is a safety feature that requires you to lean gently back before it will release. The back can be locked at the required angle by lifting the lever or left unlocked to follow the user's movements. The tension of the recline is adjusted by turning the knob located under the front of the seat.
3. The angle of the seat can be adjusted by lifting the lever located under the right hand side of the seat, towards the back. Lift the lever to set seat angle and push down to lock.
4. The back height is adjusted by lifting the back up a step at a time for correct positioning of the lumbar support. When the back reaches the top of its travel it will then drop back to the start position.
5. The inflatable lumbar support is adjusted using the hand bulb hanging under the left-hand side of the seat. Squeeze the bulb to inflate and press the button on the bulb to deflate.
6. The height adjustable arms operate by lifting the arm pad up a step at a time. When the arm pad reaches the top of its travel it will then drop back to its start position. The pads can be twisted to point 30 deg. in or out. The distance between the arms can be adjusted by unlocking the handwheels under the seat and moving them as required.
7. The Multifunction adjustable arms adjust for height by pressing in the button on the arm post and lifting the arm to the desired height. The pads can be twisted to point 30

deg. in or out and can be slid forwards for extra reach. The distance between the arms can be adjusted by unlocking the handwheels under the seat and moving them as required.

8. The seat depth is adjusted by pushing the button located below the front of the seat on the right-hand side. Slide the seat forwards and release the lever to lock in desired position.